


- Always wear personal protective equipment.
- Use the supplied parts list to check if the kit contains all the parts.
- Thoroughly clean the surface before installation.
- The product may only be installed by trained personnel.

If you have to drill or grind:

- Always wear the correct eye and hearing protection.
- Remove all material swarf before installation.
- Do not use compressed air to remove swarf, as this can cause injuries.

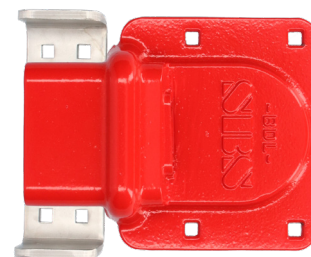

Complete installation kit	4 x M10 (securing) nuts (5115035)	1 x shim rubber (10468002)	4 x M10 120 mm bolts (5115058)
	4 x M10 spring ring		2 x 20-cm PVC pipe (5061001)
	4 x M10 washers (5115043)	4 x red plastic caps (5127008)	
		4 x black plastic caps (5127007)	

Tools required

- Drill
- Angle grinder
- Nylon-faced hammer and steel hammer
- Centre punch
- Socket wrench with long 17-mm socket
- 2 x open-ended 17-mm spanners
- 4-mm drill bit
- 11-mm drill bit
- 16-mm drill bit
- Welding equipment




Always secure nuts with threadlocker.
Locktite 243 - 50 ml
Item no. 1335886

This SBS BDL lock assures your company of the safe transportation of goods. If you have any questions or problems during installation, please do not hesitate to contact us. Good luck with the installation!

Important before installation begins

A stable frame is assumed when designing this lock. In very high/older loading bodies in particular, the movement between the doors can be so great that the lock starts to jam. To prevent this, a tube or corner reinforcements can be used to make the frame more rigid, which is also beneficial to the life of the locks and hinges. Failure to follow this installation advice may result in the loss of SCM approval. If in doubt, please consult your supplier!

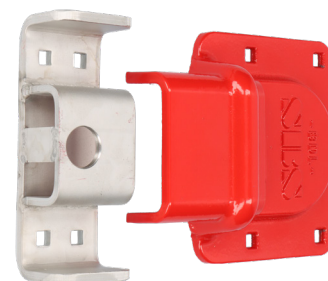

Installation Instructions

1. Park the vehicle on a flat surface.
2. Close the doors.
3. Check whether the left-hand door can be opened separately. Is this possible? Go to step 4. Not possible? Go to step 5.
4. Install a strip on the inside of the left-hand door that falls across the right-hand door. Installing a spring bolt that locks in the frame is also good.
5. Drill holes for the door plate. It is preferable to apply a layer of adhesive around these holes. Are your doors hollow? Go to step 6. Otherwise go to step 7.
6. When installing in hollow doors, it makes sense to drill the holes somewhat larger and to install the PVC tubes and a plastic or metal plate to the inside of the door to strengthen it.
7. The rubber rear plate must bridge the thickness of the closing rubber. Install this together with the door plate and the nuts, bolts and rings supplied.
8. Check whether the lock housing can be installed without a problem.
9. Install the lock housing on the left-hand door using monobolts (not supplied).
10. Check whether the door locks properly and that the fit of the BDL and the lock housing is exact.
11. Hang the lock in the lock housing. The lock must hang freely and must not jam.

TL-H03b-2303

